


PROPER PLACEMENT OF A ROCK CHECK DAM IN A DRAINAGE WAY

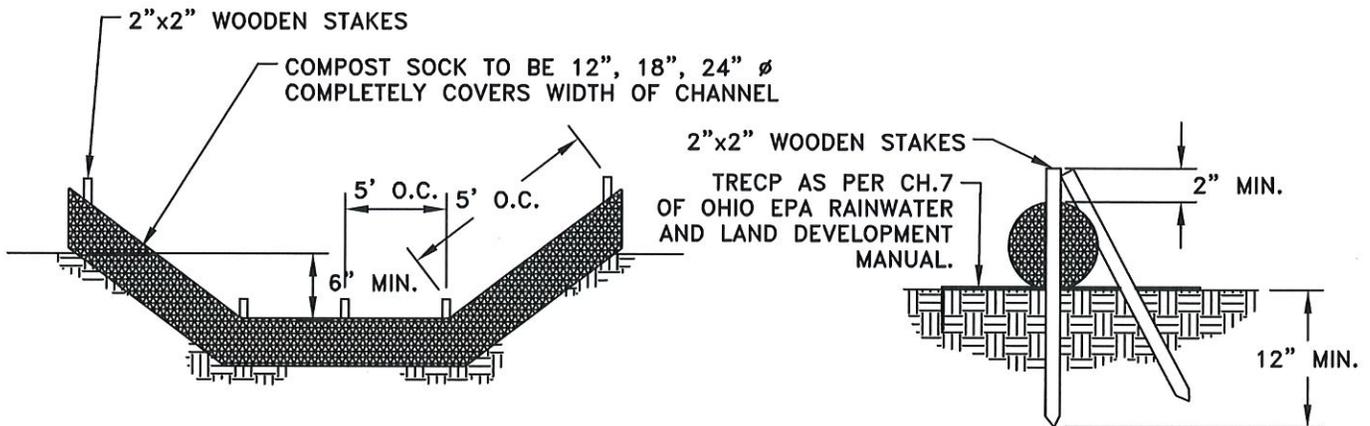

NOTE: COMPOST SOCKS SHALL BE USED WHERE DRAIN AREAS IS LESS THAN 5 ACRES.

PROPER PLACEMENT OF A COMPOST SOCK CHECK DAM IN A DRAINAGE WAY

NOTE: SEE OHIO EPA RAINWATER AND LAND DEVELOPMENT MANUAL CHAPTER 5 FOR SPECIFIC SPECIFICATIONS AND DESIGN CRITERIA.

APPROVED <u>7-13-20</u>  CITY ENGINEER	EROSION CONTROL CHECK DAMS	CITY OF LANCASTER, OHIO DEPARTMENT OF ENGINEERING	
REVISED: 13 JUL 20		STANDARD CONSTRUCTION DRAWING DWG. BY: ADH CHK'D BY: MN FILE NUMBER D-6	